



REGISTER DIRECT

Addressing mode	Details	Where is the operand?	Where is the address of the operand?	Sample instruction
Register direct	The instruction contains the location of a register which contains the operand. The operands are both registers, and the only thing that's being updated is a register.	In the register set.	The instruction itself points to the register that is the operand.	MOV R1, R2 ADD R1, R2

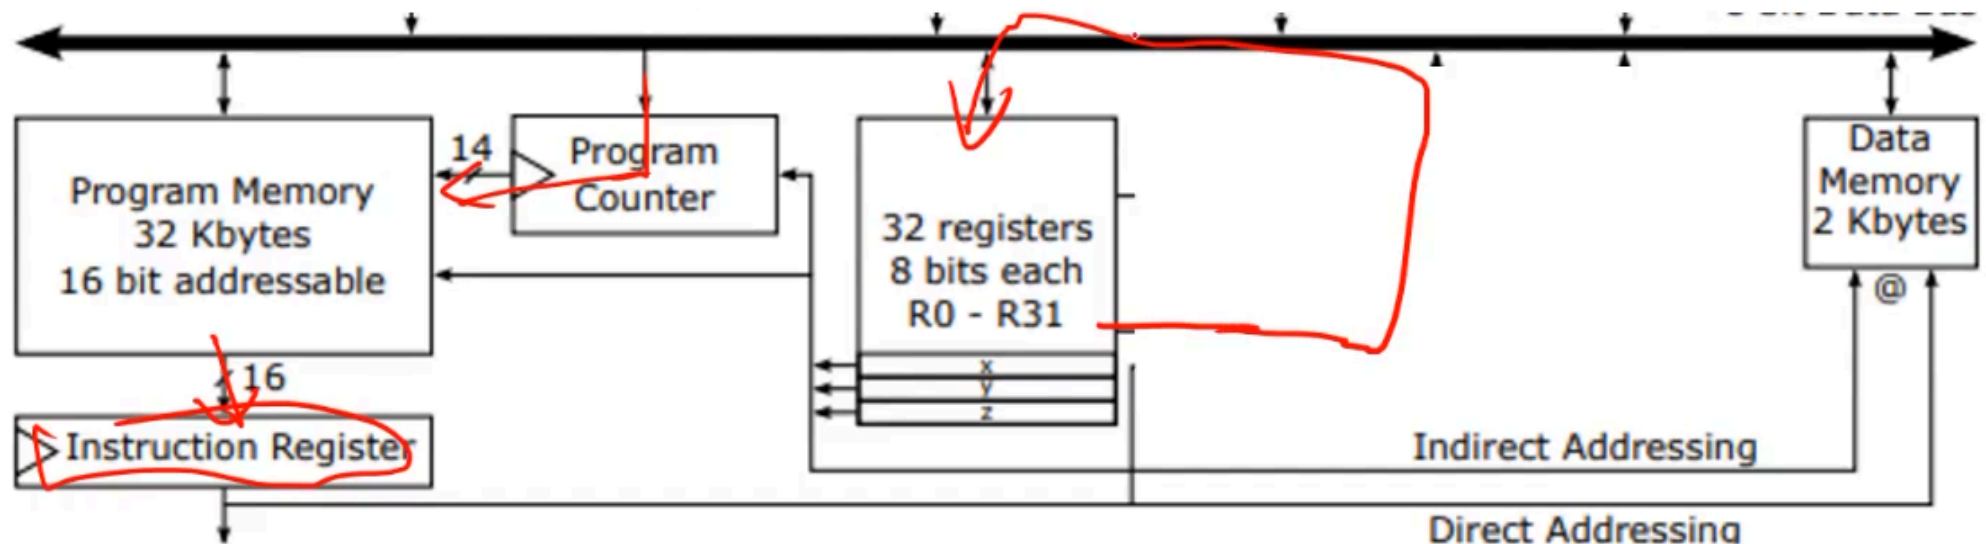


IMMEDIATE

Addressing mode	Details	Where is the operand?	Where is the address of the operand?	Sample instruction
Immediate	The instruction contains the operand itself. e.g. for SUBI R1, 5 The program will subtract a value from R1 <i>which is held in the instruction register</i>.	In the instruction itself.	No address required.	SUBI R1, 5

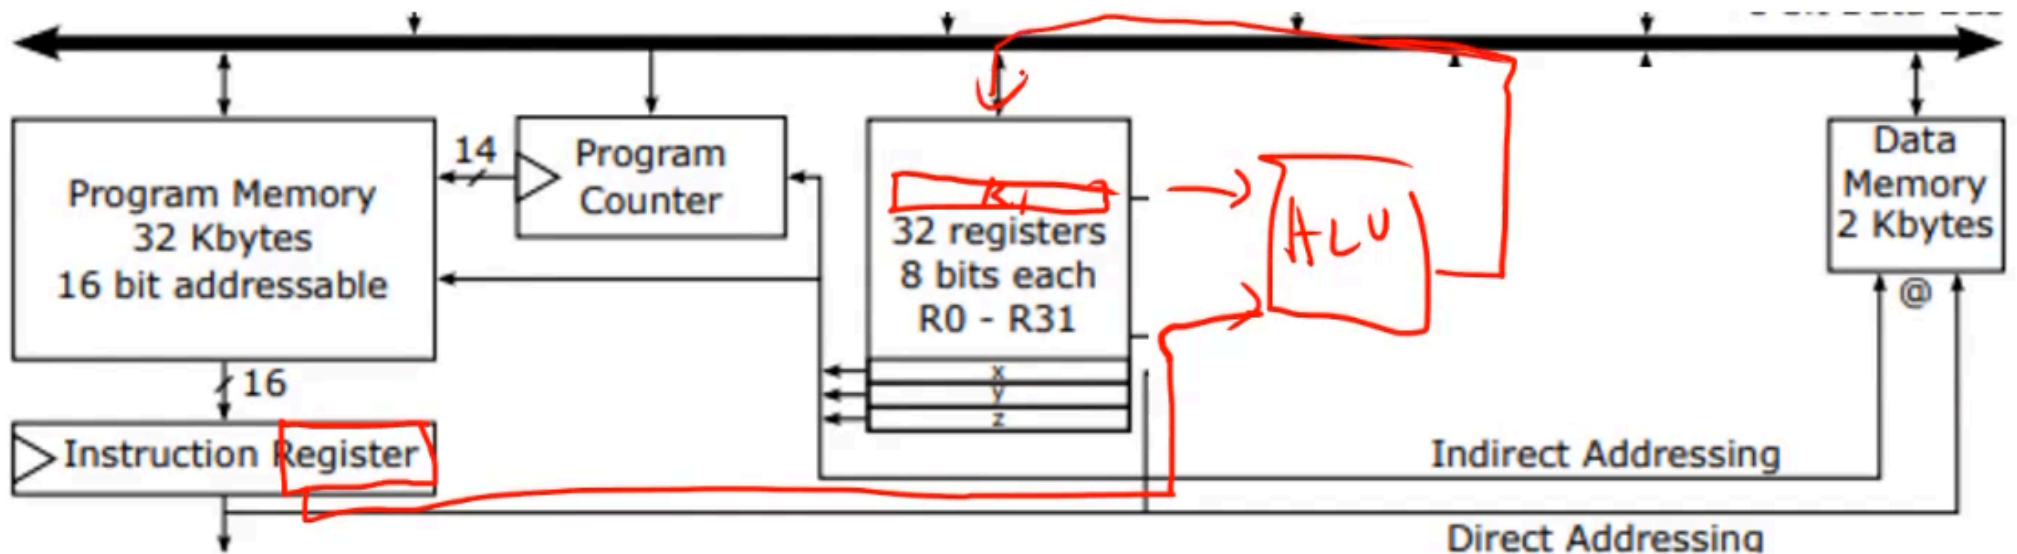


DATA DIRECT

Addressing mode	Details	Where is the operand?	Where is the address of the operand?	Sample instruction
Data direct	The instruction contains the address of the memory location of the operand.	In data memory.	In the instruction itself (in the instruction register).	LDS R11, a

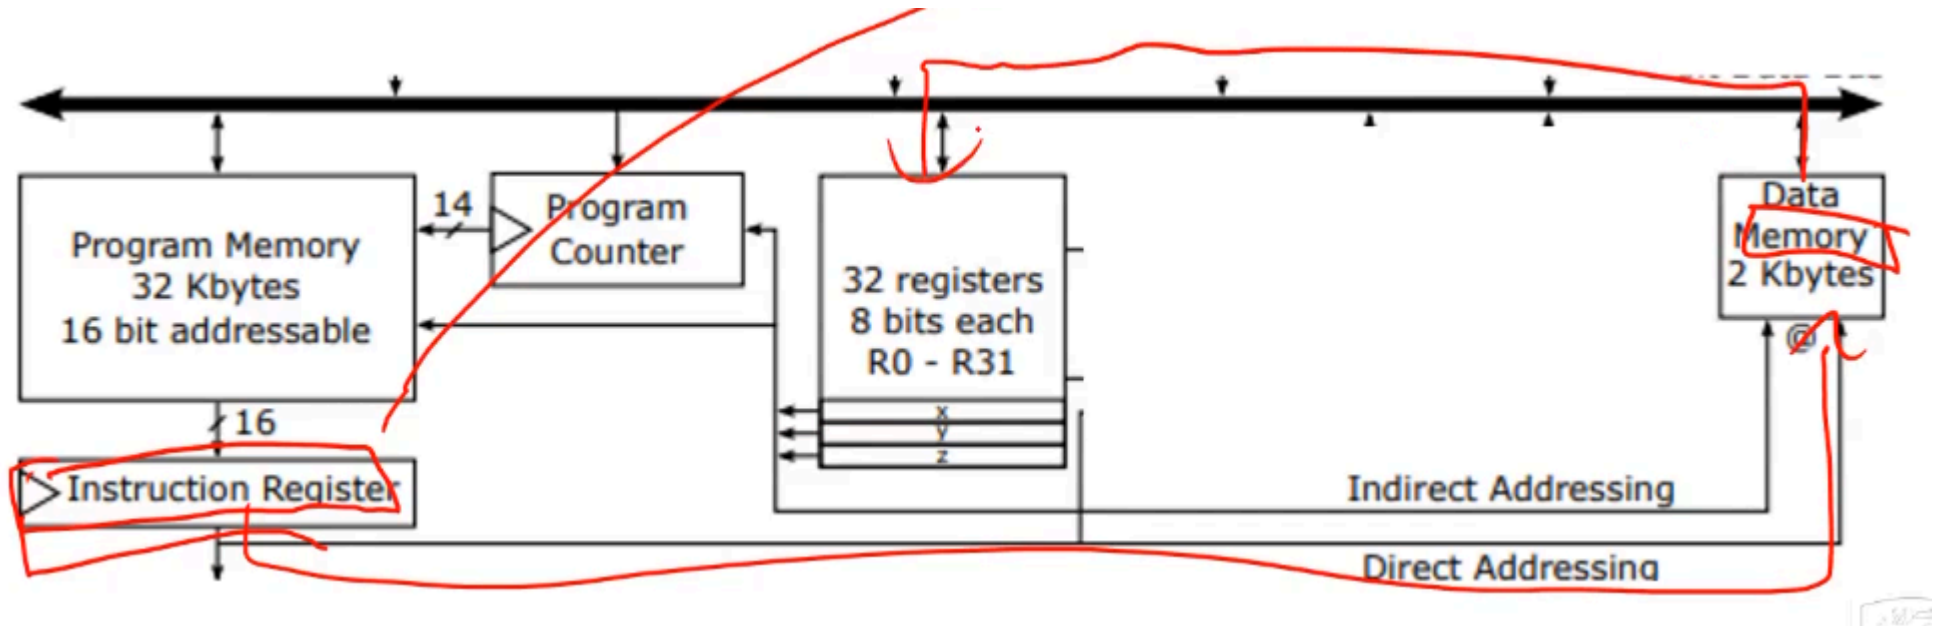

DATA INDIRECT

Addressing mode	Details	Where is the operand?	Where is the address of the operand?	Sample instruction
Data indirect	The instruction contains the address of a register (X, Y or Z) which contains the memory address of the operand.	In memory.	In register X, Y or Z.	Load instructions to do with X, Y and Z registers. LD R8, X+

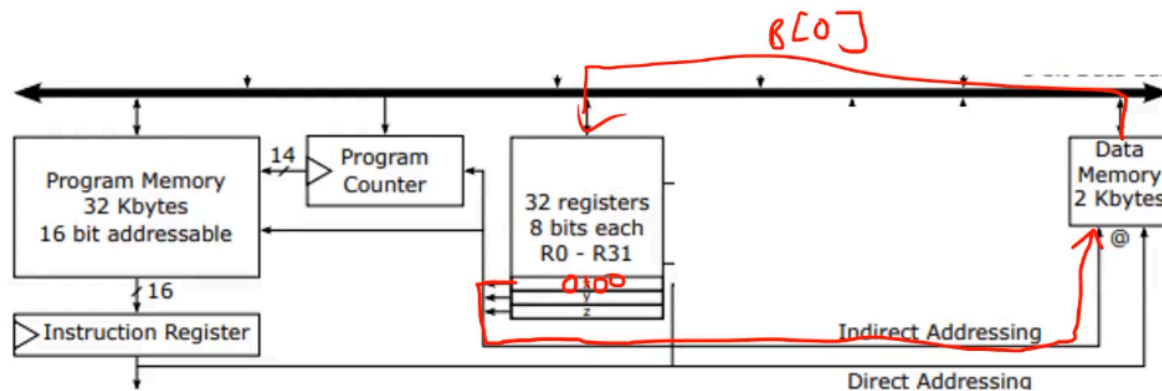

Addressing Mode 4: Data Indirect

- Sample Instruction: (LD)
- Where is the operand?
- Where is the address of the operand?

